

M•LOCKS

Basic line

EM1620

EM2020


EM2520

EM3020

EM3520

User manual

V01 EN

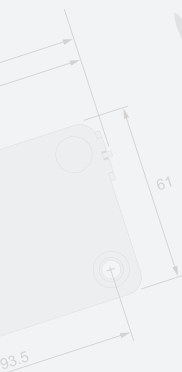

M•LOCKS BV

Vlijtstraat 40 • 7005 BN Doetinchem • The Netherlands • www.m-locks.com

M-LOCKS

CONTENT INSTRUCTIONS FOR USE

- 1 Important instructions
- 2 Symbols and signals
- 3 Opening the lock
- 4 Changing managercode (with the door open!)
- 5 Adding a new code/user
- 6 Delete second user
- 7 Setting the opening delay and opening window time
- 8 Deleting the delay setting
- 9 Replacing the battery
- 10 Troubleshooting

The world of M-LOCKS

M-LOCKS has extensive experience in this field and is a well-known, independent distributor and producer of high-security locks and locking systems for fire safes, security safes and doors.

M-LOCKS' products are (nearly) invisible, but present everywhere. For example, they are installed in ATMs, banks, shops and offices.

1 IMPORTANT INSTRUCTIONS

- Before using the lock, please read the instructions for use carefully.
- The instructions for use only relate to the lock itself and not to how to operate the safe.
- Ensure that you **only** program the lock when the **safedoor is open**.
- After changing the code, always try the code several times with the safedoor open.
- **Only after several positive function test (opening / closing) the safedoor can be closed.**
- Each key entry is confirmed by an audible tone and visual signal. These signals are not referred to in the description that follows.
- You have a maximum of 10 seconds for each key entry. If you do not make an entry via the keypad during this period of 10 seconds, the entry procedure will automatically abort. You must then start again from the beginning.
- After entering a valid code, you will hear two audible tones. An invalid entry will trigger a long tone.
- If you accidentally enter an invalid code at the first attempt, you must wait 20 seconds before you re-enter the code.
- If the code is entered incorrectly on four consecutive occasions. The keypad and the lock will be disabled for 5 minutes. During this period, the LED will flash every 10 seconds and you will hear a long tone when attempting to make an entry.
Entering an incorrect code on a further two occasions after the keypad has been re-enabled will trigger a new keypad lock-out period of 5 minutes.
After entering a valid code you have four new occasions to enter the code and open the lock.
- The lock is activated by a six-digit code.
- At the time of delivery, the lock is set to the standard Manager Code of 1 2 3 4 5 6. Change this code immediately to your own choice of Manager Code. Do not use personal or other information which can easily be found out by others for your Manager Code.
- You can even add a second code (User Code).
- Please keep your code in a safe place and keep it away from persons that are not allowed using it.
- Depending on the used lock/keypad and the way the lock is installed, there are several ways to open and to close a safe. By example with a lever or by turning the keypad. Please contact your safe specialist for more information about your specific situation.

! **Caution! Don't forget your code, the lock can not be used anymore!**

! Caution!

- The lock has been designed for use in a temperature range from +10°C to +50°C and a non-condensing humidity range from 30% to 80%.
- It may only be cleaned with a moist cloth (do not use aggressive cleaning agents).
- The lock may only be installed by qualified fitters.
- The lock may not be lubricated.
- Never open the lock housing. If it is necessary to disassemble the hardware, only do so in accordance with the technical instructions. If you fail to do so, the lock may no longer function properly and you will forfeit your right to warranty.

2 SYMBOLS AND SIGNALS

double audible tone, **correct**
entry



LED **flashes**



digit on keypad



long audible tone, **incorrect**
entry



LED **illuminated**



press and hold

3 OPENING THE LOCK

Enter the code (Manager Code set at the factory = 1-2-3-4-5-6), if the code is correct, you will hear a double tone, you can now unlatch the door and open it. If the door is not opened within 3 seconds, the lock will automatically engage again. **EM3020**: to close the lock, press any key.

4 CHANGING MANAGERCODE (WITH THE DOOR OPEN!)

Press and hold '0' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter the old code

For example!



- Select your new personal code. Enter the new code 🎵🎵



- Enter the new code again 🎵🎵

If an incorrect code is entered on the second occasion, you will hear a long tone and the old code remains valid.

5 ADDING A NEW CODE/USER



Press and hold '1' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter your personal Manager Code 🎵🎵

For example!



- Enter the new User Code 🎵🎵



- Enter the new User Code again 🎵🎵


If an incorrect code is entered on the second occasion, you will hear a long tone and the old code remains valid.

6 DELETE SECOND USER



Press and hold '3' until you hear a double tone. The LED will illuminate when performing the following actions:

 


- Enter your personal Manager Code 
- The user has been deleted.

7 SETTING THE OPENING DELAY AND OPENING WINDOW TIME

Opening delay: The time between the first and second code entry in minutes.

Opening window time: The period of time in minutes during which the code can be entered a second time and the lock can be opened.




Press and hold '9' until you hear a double tone. The LED will illuminate when performing the following actions:




- Enter the Manager Code 



- Enter the delay setting and opening window time.
In this example: 2602 for **a delay of 26 minutes** and **an opening window time of 2 minutes** 



 
- Enter the delay setting and opening window time again 

8 DELETING THE DELAY SETTING

The delay setting can be changed or deleted during the opening window time.



Enter a valid code. After the delay period the opening window time starts. The LED flashes 1x a second and beeps.



Press and hold '9' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter the Manager Code



- Delete the delay and opening window time by entering **00 for the delay setting** and **01 for the opening window time**.



- Enter the delay setting and opening window time again .

9 REPLACING THE BATTERY

If the lock emits a series of audible tones when opened,



the battery is almost exhausted and must be replaced immediately.

You may **only use 9V Alkaline Duracell, Duracell Industrial or other Energizer block batteries**.

Battery compartment in entry unit

Open the battery compartment and replace the battery by a new one.

Battery compartment inside the safe

In the case of keypads starting with ST40xx and DE20xx the battery compartment is located inside the safe. If the battery is completely exhausted, hold a fresh battery pressed against the poles on the front of the keypad, while entering the code, until the lock opens completely.

10 TROUBLESHOOTING

The lock does not react.

a. Check the keypad


If the lock does not react, follow the procedure below to check that your keypad is working.


Press and hold key '5' until you hear a double tone. The LED will illuminate when performing the following actions:



Next, press all of the keys in one by one and one after the other



If the key = OK 

If the key = not OK , the test will be aborted.

If one or more keys do not operate properly, please contact your supplier.

b. The lock does not emit any audible tones at all

The lock does not emit an audible tone when a key is pressed. The battery is exhausted, replace the battery. See point 9.


c. I have forgotten my code

For security reasons, M-LOCKS does not provide a code that you can use to open your lock. Please contact your supplier.

d. The lock is difficult to move and open

This is probably a problem with the lock bar mechanism, inside the safe door, and not the lock itself. This manual only relates to the lock and not the complete safe. Please contact the manufacturer of the safe in order to resolve this problem.

M•LOCKS

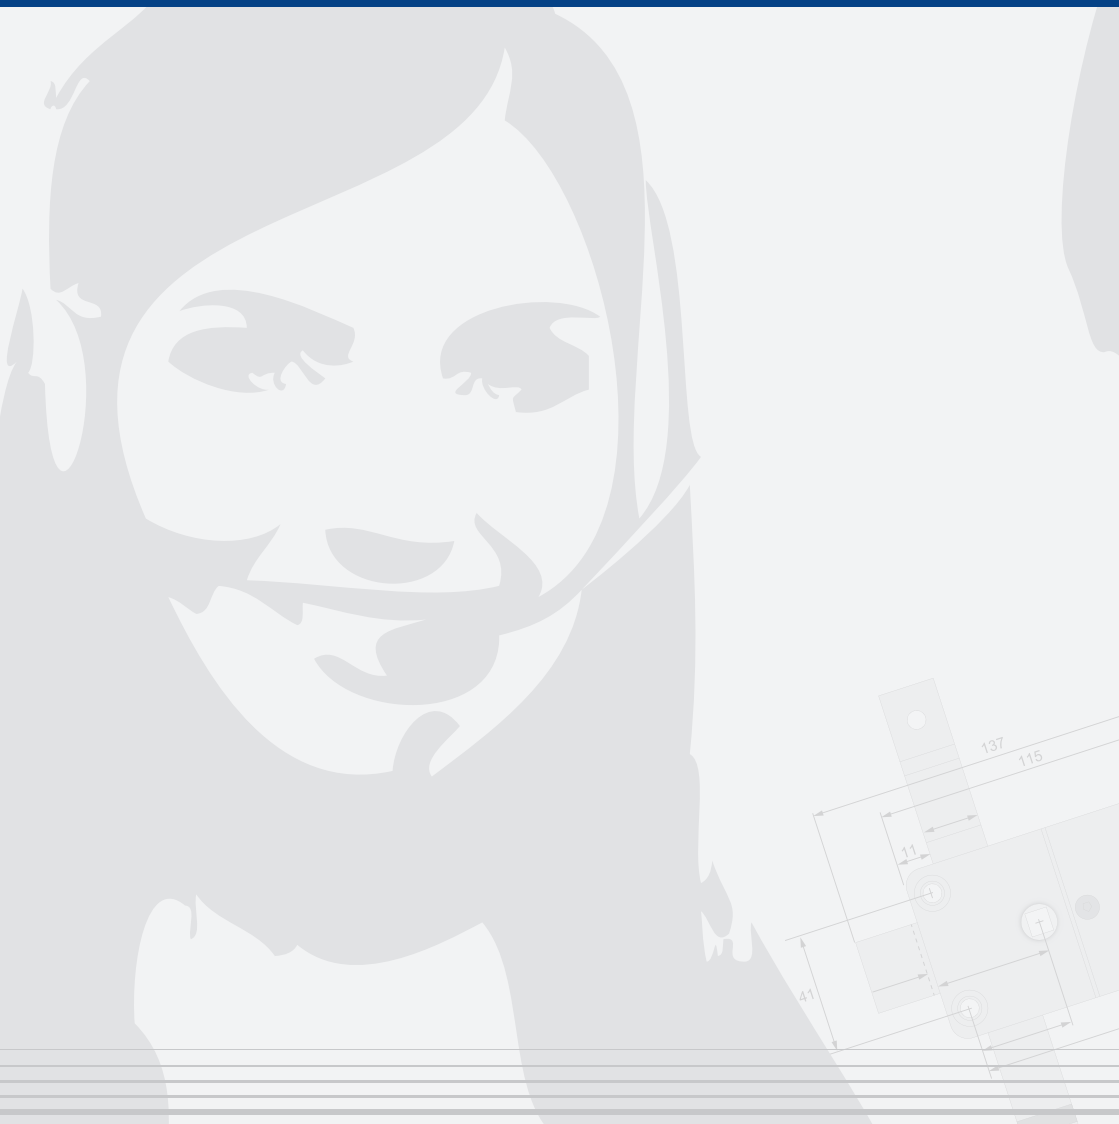

M•LOCKS BV

Vlijtstraat 40 • 7005 BN Doetinchem • The Netherlands • www.m-locks.com